

# ***Lava SSerial-550***


## ***Installation Manual***

---


---



# Hardware Set-Up

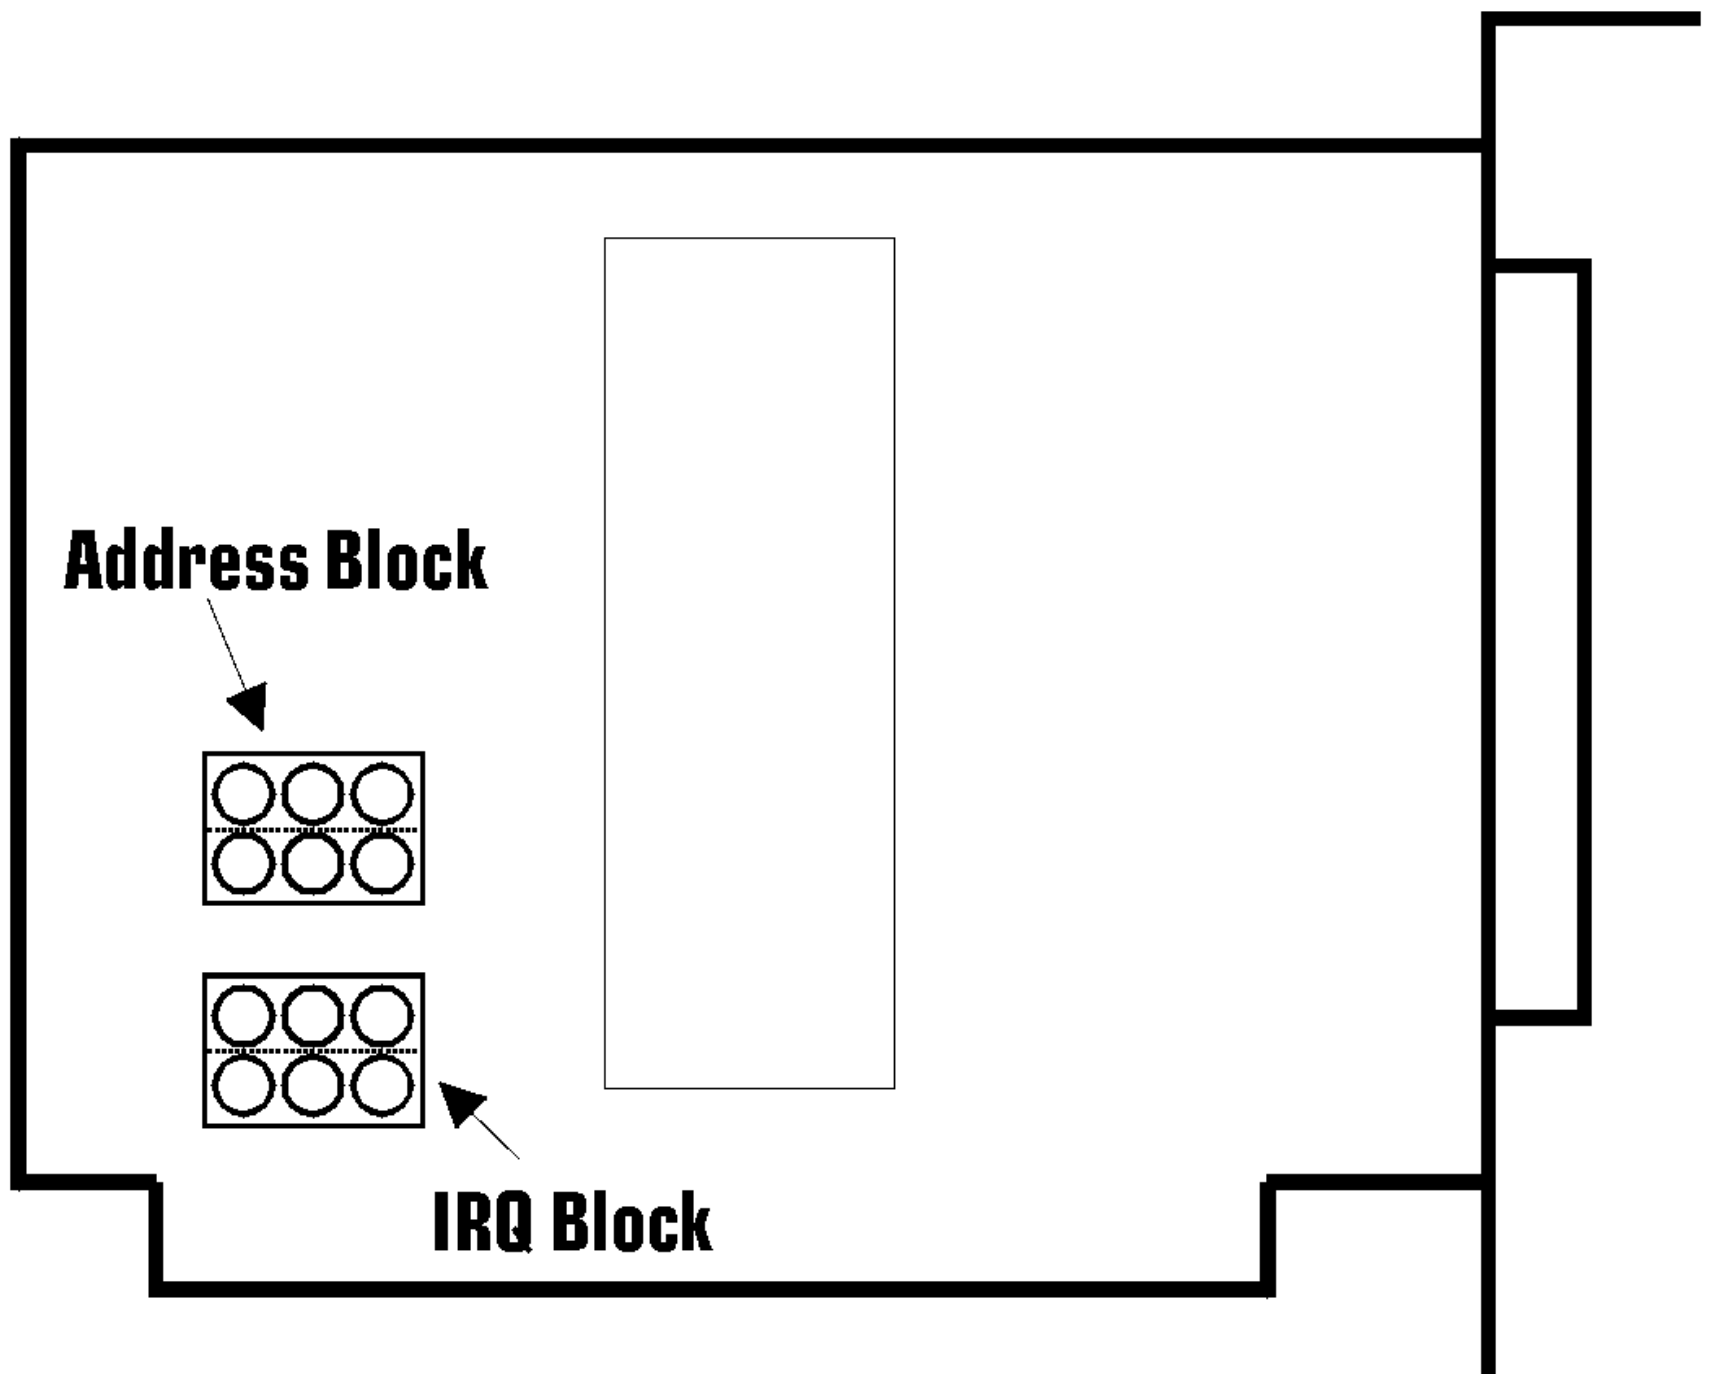

## Address Block Configuration (COM Settings)

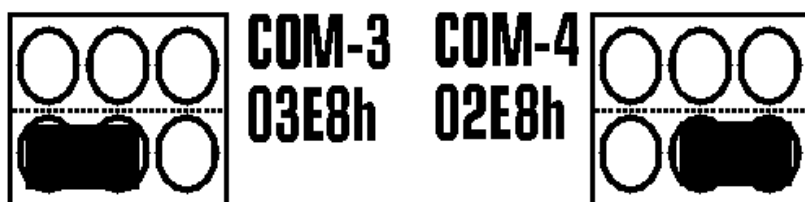

## IRQ Block Configuration



# **Serial Configuration**

1. Put only one jumper on each jumper block, to represent the desired Com & IRQ setting.
  2. If you have only one Com port, set up the SSerial-550 for Com 2 and IRQ 3.
  3. It is recommended that each Com Port be assigned a unique IRQ by the user.
- 

1. Afin d'obtenir les "COM" et "IRQ" désirés, veuillez n'installer qu'un connecteur par bloc de connecteurs.
2. Si vous avez un "COM," ajoutez la SSerial-550 pour "COM" 2 et "IRQ" 3.
3. On veut avoir l' "IRQ" unique pour chaque "COM" Port.

# **Lava**

## **Technical Support**

tel: (416) 674-5942

9am to 5:30pm Monday to Friday (Eastern Time)

fax: (416) 674-8262

email: [tech@lavalink.com](mailto:tech@lavalink.com)

Internet: [www.lavalink.com](http://www.lavalink.com)



**Lava Computer MFG Inc.**  
**Toronto Canada M9W 5V8**